


Quick Start Guide

What's Included:

- 1 LiFT LTE-V VoLTE Gateway
- 1 12V DC power adapter
- 1 Preactivated SIM card
- 1 1,850 mA Lithium-ion battery
- 1 6-Meter, high gain antenna
- 1 Phone cord
- 1 lockable enclosure (if ordered separate)

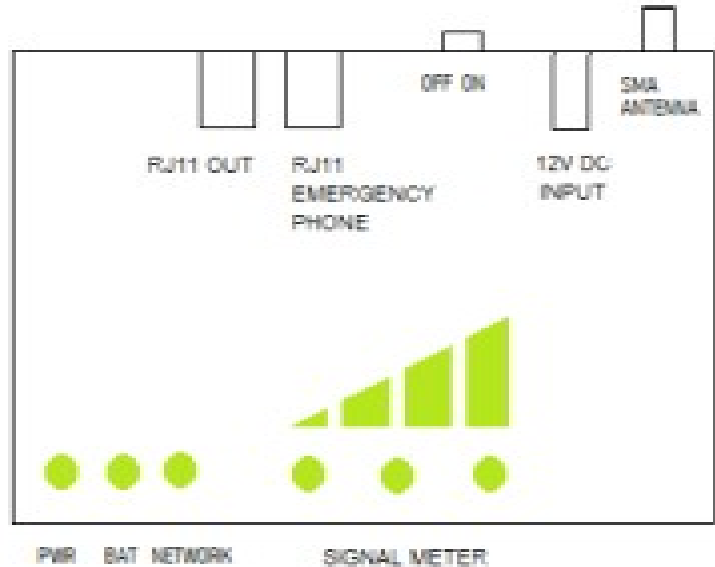

Installation and Use:

The SIM card has been preinstalled and will be activated by your dealer. **CHARGE DEVICE FOR 24 HOURS PRIOR TO INSTALLATION**

****Special Note: Test the emergency phone(s) on the existing phone line(s) to verify that they work properly.**

Step 1: Connect the antenna to the SMA Port.

Step 2: Turn the power switch to on. Charge the battery for 24-hours before use. It could take up to 2-3 Minutes for the gateway to connect to the network.

Step 3: Locate an area in the facility that has good LTE signal coverage, **2+ Bars** are required. The device can be run on battery to assist in this process. The ideal location is in the telephone equipment room or near the D-Marc. Remoting the gateway or antenna may be necessary to achieve a good signal.

Step 4: Connect an analog telephone or linesman's test set to the gateway, obtain a dial tone and dial: ****613#** and hang up. If done correctly you will notice a change in dial tone sound.

Step 5: Mount the enclosure cabinet. Use the electrical knock outs on the cabinet that work best for your situation to route the power cord, phone line and antenna cable. Each cable must enter through its own knockout to prevent noise/ interference on the device and phone line.

Step 6: Locate and identify the phone line used for the elevator or emergency phone. Once identified it can be spliced onto the phone cord provided or you can crimp an RJ11 plug onto the line.

Step 7: The phone line you identified will plug into the other side of the CTM.

Step 8: Test the emergency phone by making a call. Tell the answering party that you are only testing and ask how the call quality is on their end. Also, verify that the emergency phone is disconnecting and terminating the call properly.

Step 9: If the emergency phone does not have CPC protocol to end the call the gateway will end the call in about 60- Seconds. If you need to end the call sooner, you will need to install a Viking CPC-1 module.

Cautionary Notes:

Use in hospitals or medical facilities: Be sure to follow any regulations or rules. Switch the device off near medical equipment.

Aircraft: It is illegal to use this device on aircraft.

Fueling stations: Do not use this device at a refueling point. Do not use near fuel or chemicals.

Children: Keep out of reach of children

Antenna: Keep the antenna 1-meter away from other electronic equipment. Do not pair the antenna cable with the phone line as it will cause interference.

TECHNICAL SUPPORT: (888) 338-3911